


Vw = working voltage      Vr = rated voltage

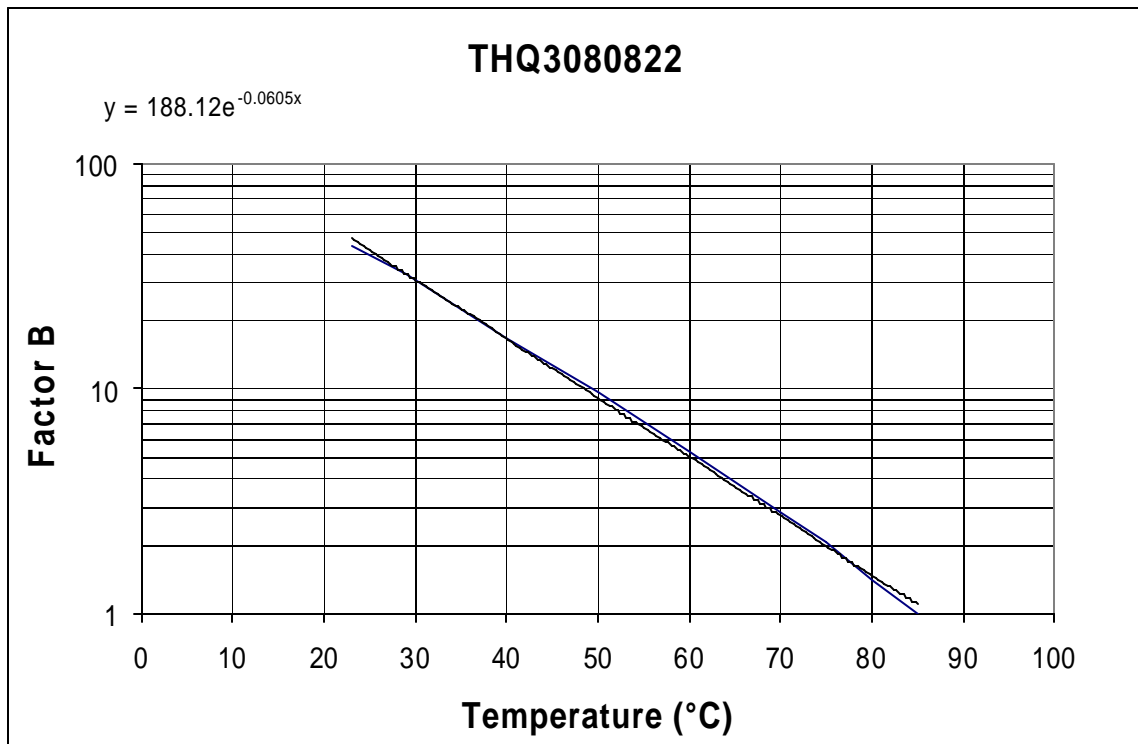

Minimum Predicted life (hours) = 2000 X (Factor A) X (Factor B)